



Before

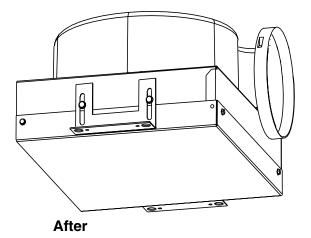

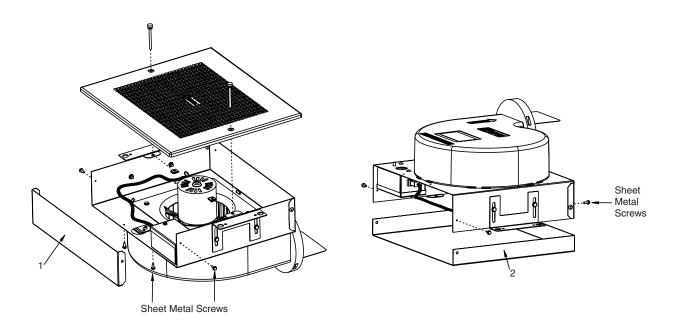

Gemini 100 Ceiling to Inline Conversion

The Gemini 100 series can be field converted from ceiling to inline by following these steps: a. Remove and discard the inlet box end plate #1, see illustration. b. Install the inline cover panel #2 with the same sheet metal screws, as shown in illustration.

Note: Conversion should be done before installing fan in ductwork.

Quantity	Ceiling to Inline Conversion Kit Parts List
	Description
1	Inline Cover Panel

Gemini Ceiling to Inline IOM Supplement - July 1999